


COMPATIBLE PRODUCTS

TEHR sensors and transmitters.
HDH and KLH temperature measurement


HLS room controllers

ASSEMBLY INFORMATION

Device can be fitted with screws on inside wall (IP20) or a junction box. Suitable fitting information is shown on pictures above.

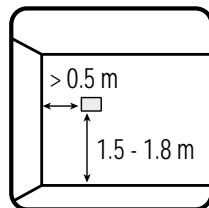


Suitable fitting dimensions (height and minimum distance from corner.

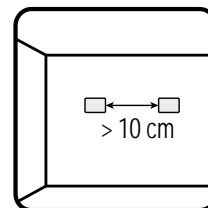


Minimum distance between two separate transmitters on the same wall.


Fitting location of the device should be chosen with care. All error factors which affects to the measurement, must be prevented well as possible. For example:

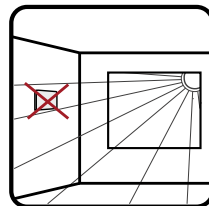


Do not fit in a location where the sun can shine directly.

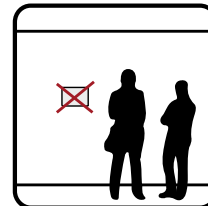


Do not fit in a location where people's continued presence affects the measurement.

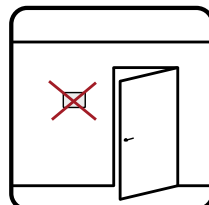


Do not fit near doors and windows.

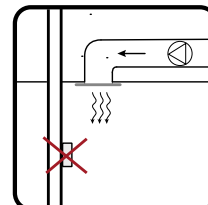


Do not fit in a location where air duct can affect the measurement.

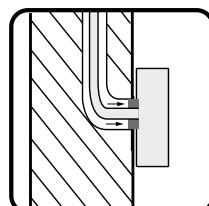

Prevent air flow from the flush mounting box.

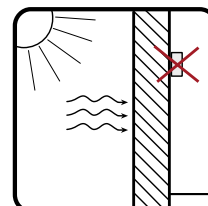

Do not install on outer wall.

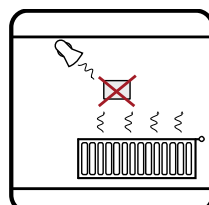

Do not fit in location where heating coil or direct lighting affects the measurement

ASSEMBLY

1. Choose the assembly location and fit the device on the wall.
2. Connect the cables to the terminals of the device. Tighten the terminal screws well.
3. Turn the power on. If necessary, make the device commissioning by help of operating instruction.

DIMENSIONS

